



## USB-3106

### Analog Output Module for ODiSI

The USB-3106 works with the ODiSI 6000 Series interrogator to provide 16 channels of analog output signals controlled in real time by the value of select strain or temperature gages. This enables easy integration of high-definition fiber optic sensor measurements with analog interfaces of external measurement and control equipment.

The USB-3106 provides 16 channels of analog output. Each channel has a 16-bit D/A converter (DAC) that drives a voltage and current channel output. The voltage output can be configured to output of  $\pm 10$  V or 0 to 10 V, while the current output provides 0 to 20 mA. Each channel has  $\pm 30$  V overvoltage and indefinite short-circuit protection.


The USB-3106 connects directly to an ODiSI 6000 Series controller via a USB connection. Using the ODiSI application software, you easily select a gage and assign it to a specific output channel.

### KEY FEATURES

- Up to 16 analog outputs
- Device can be configured to generate voltage or current outputs
- Easy integration with ODiSI system via USB
- Quick configuration within ODiSI application software


### APPLICATIONS

- Real-time feedback for closed loop control based on individual gage measurements
- Easily interface ODiSI data to external measurement and control equipment
  - Analog controllers
  - Data loggers with analog inputs
  - Chart recorders

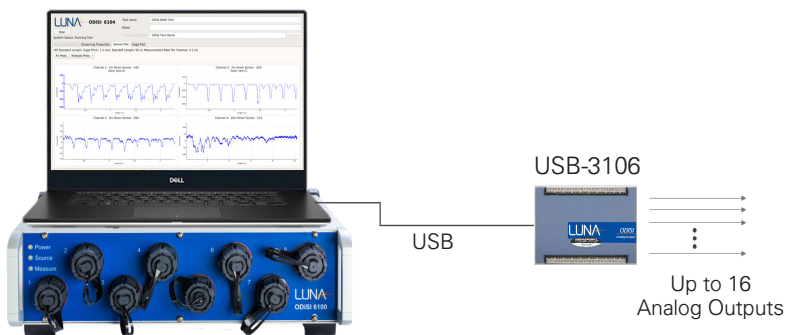

ODiSI 6000 Series  
Optical Distributed Sensor Interrogator

The USB-3106 adds up to 16 analog voltage or current outputs to an ODiSI system.

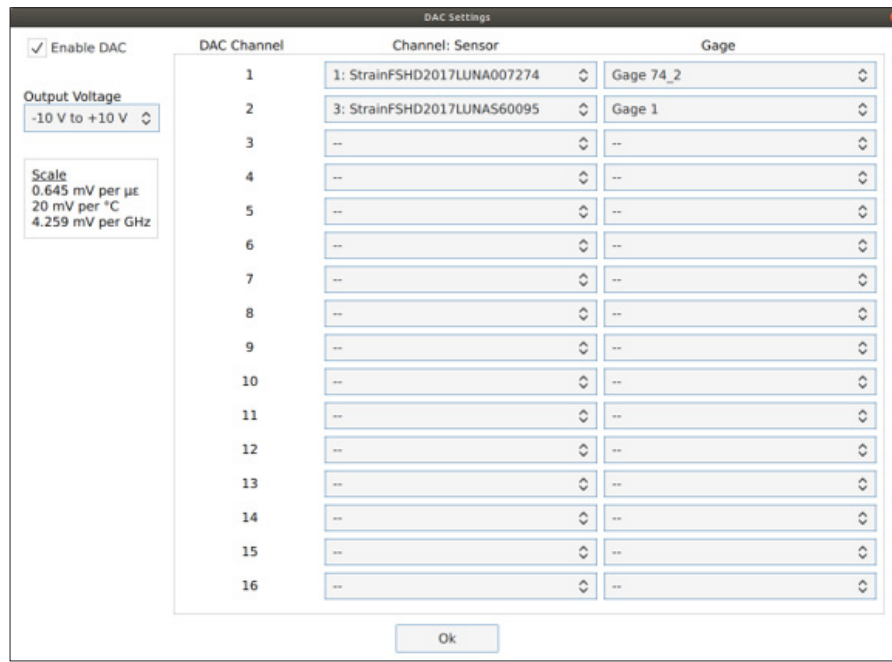

Configuration of the USB-3106 analog outputs in the ODiSI 6000 Series application software.

## PERFORMANCE

PARAMETER	Specification
Number of output channels	16, voltage or current
Analog output resolution	16 bits
Output update rate	100 Hz divided by number of active DAC outputs
<b>Voltage Output Mode</b>	
Output range (software-selectable)	±10V, 0 to 10 V
Output current	±3.5 mA, typical
Power on state	0 V
<b>Current Output Mode</b>	
Output range	0 to 20 mA, typical
Compliance voltage range	8 - 36 V
<b>Environmental and Mechanical</b>	
USB cable length	3 m max
Power	Powered by USB from controller
Operating temperature	0 to 50 °C
Storage temperature	-40 to 85 °C

## ORDERING

Part Number	Description
OPT06020	USB-3106 analog output module with 16 voltage or current outputs



+1.866.586.2682  
 solutions@lunainc.com  
[www.lunainc.com](http://www.lunainc.com)